

Important instructions for planning and installation with BRC optimizer M600-M

To correctly install the Power Optimizer M600-M and to avoid problems from the very beginning, please note the following introductions:



1. If an **inverter with a MPP input current (I_{MPP}) of more than 16A** is used, it is not allowed to install the Power Optimizer M600-M at every pv module. In this case it is only allowed to equip a maximum of 50% of all pv modules of each string with a Power Optimizer M600-M.

You can check if this is necessary with our inverter checker:

<https://brc-solar.de/power-optimizer/wechselrichter-checker/>

2. **Do not use the Power Optimizer M600-M if strings or pv modules are connected in parallel!** To avoid this situation, please connect all shaded pv modules to a separate string without a parallel connection. This string can then be equipped with the Power Optimizer M600-M.

In case of any further questions regarding those cases, please contact the support of BRC: (Tel.: [+49 7243 924 1486](tel:+4972439241486) / E-Mail: support@brc-solar.de).

3. Always **connect the Power Optimizer M600-M according to the following sequence:**
First connect the short cables to the pv module, then connect the long cables to the string.

Hints:

- **PV testing equipment** cannot measure the current in a string where every module is equipped with an optimizer. This is only possible by using a current clamp during operation.
- If a short circuit test is performed in a plant with M600-M optimizers, the test will not provide usable results.

