




Important instructions for planning and installation with BRC Optimizer M600-M

To correctly install the Power Optimizer M600-M and to avoid problems from the very beginning, please note the following introductions:

- 1** If an **inverter with a MPP input current (IMPP) of more than 16A** is used, it is not allowed to install the Power Optimizer M600-M at every pv module. In this case it is only allowed to equip a maximum of 50% of all pv modules of each string with a Power Optimizer M600-M. You can check if this is necessary with our inverter checker: <https://brc-solar.de/en/power-optimizer-en/inverter-checker/>
- 2** **Do not use M600-M optimisers with parallel strings.** Optimisers are only possible if only one string is connected to an MPP tracker. Only then can this string be equipped with M600-M optimisers. If you have any questions about redesign in such cases, please contact the support department at BRC Solar. (Tel.: +49 7243 924 1486 / Email: support@brc-solar.de)
- 3** Always **connect the Power Optimizer M600-M according to the following sequence:** First connect the short cables to the pv module, then connect the long cables to the string.

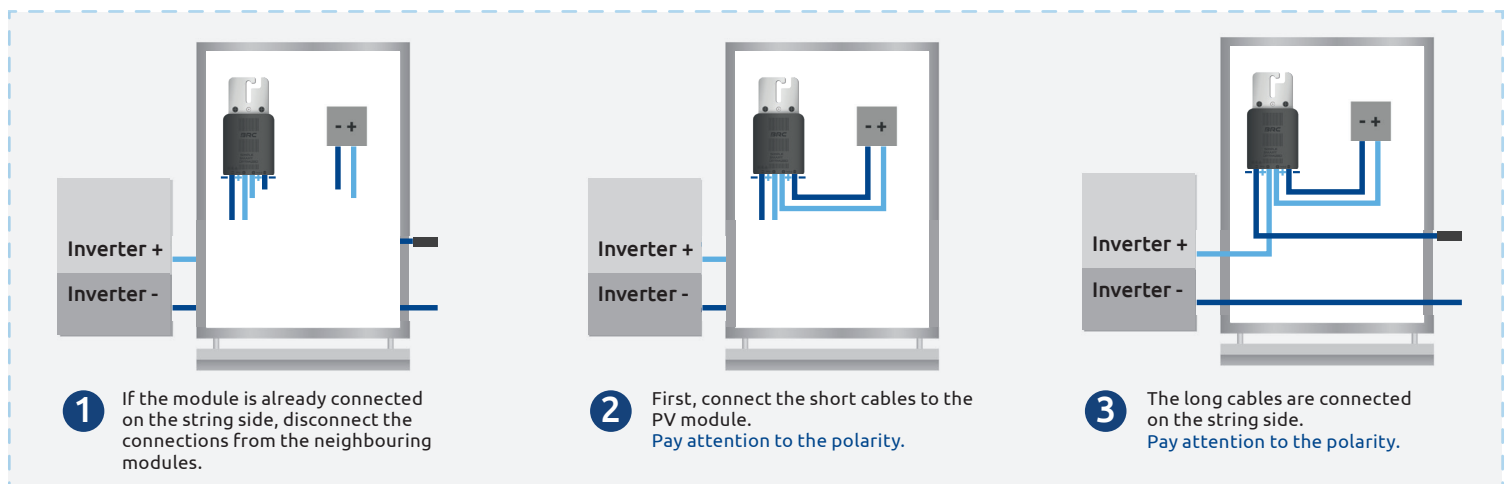

Note:

- **PV testing equipment** cannot measure the current in a string where every module is equipped with an optimizer. This is only possible by using a current clamp during operation.
- If a short circuit test is performed in a plant with M600-M optimizers, the test will not provide usable results.