




## Important instructions for planning and installation with BRC Optimizer M605-M

To correctly install the Power Optimizer M605-M and to avoid problems from the very beginning, please note the following introductions:

- 1 Do not use M605-M optimisers with parallel strings.** Optimisers are only possible if only one string is connected to an MPP tracker. Only then can this string be equipped with M605-M optimisers. If you have any questions about redesign in such cases, please contact the support department at BRC Solar. (Tel.: +49 7243 924 1486 / Email: support@brc-solar.de)
- 2 Always connect the Power Optimizer M605-M according to the following sequence:** First connect the short cables to the pv module, then connect the long cables to the string.

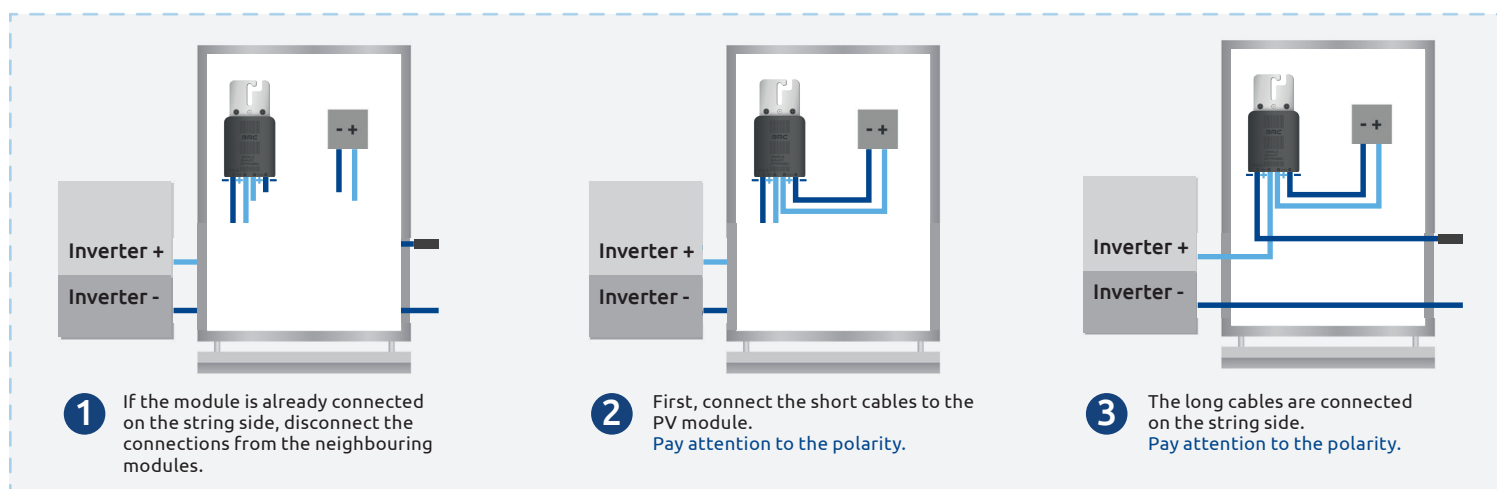

### Note:

- **PV testing equipment** cannot measure the current in a string where every module is equipped with an optimizer. This is only possible by using a current clamp during operation.
- If a short circuit test is performed in a plant with M605-M optimizers, the test will not provide usable results.